

## **Toshiba Digital and IP phone guide for changing the ringer pitch style.**

The Toshiba phones can have adjustable ring tones for each Intercom button, and each line button if the phone has one.

### **To change the ring on an Intercom button from an outside call.**

- \* With the phone idle press #9876  
*The phone will say "User Programing Mode" on the screen.*
- \* Press the Intercom key  
*The phone will say "External Call" and what the pitch number is (Pitch is the same as ring tone).*
- \* You can type a new pitch number at this point.  
*Valid pitch numbers are 01, 02, 11, 12, 13, 14, 15, 16, 17 and 18. Pitches 01 and 02 are short beeps. Pitches 11 through 18 are traditional sounding ringers.*
- \* Press the Intercom key to save.
- \* Lift and drop the handset to exit the programing mode.

### **To change the pitch of an Internally originating call, such as a call from another extension in your phone system.**

- \* With the phone idle press #9876  
*The phone will say "User Programing Mode" on the screen.*
- \* Press the Intercom key  
*The phone will say "External Call" and what the pitch number is.*
- \* Press the hold key  
*The phone will say "Internal Call" and what the pitch number is.*
- \* You can type a new pitch number at this point.  
*Valid pitch numbers are 01, 02, 11, 12, 13, 14, 15, 16, 17 and 18. Pitches 01 and 02 are short beeps. Pitches 11 through 18 are traditional sounding ringers.*
- \* Press the Intercom key to save.
- \* Lift and drop the handset to exit the programing mode.

### **To change the pitch of a Line button. (not all phone systems will have line buttons)**

- \* With the phone idle press #9876  
*The phone will say "User Programing Mode" on the screen.*
- \* Press the Line key you wish to change. Each line key is adjusted individually, and each line can have a different tone.  
*The phone will say "External Call" and what the pitch number is.*
- \* You can type a new pitch number at this point.  
*Valid pitch numbers are 01, 02, 11, 12, 13, 14, 15, 16, 17 and 18. Pitches 01 and 02 are short beeps. Pitches 11 through 18 are traditional sounding ringers.*
- \* Press the Line key button of the line you are changing to save.
- \* Lift and drop the handset to exit the programing mode.